

Commissioning using a local control (1W transmitter) io-homecontrol receiver integrated in a terrace heater

1 Switch on the power supply



Power on



Power supply: 230 V - 50 Hz

2 Take control of the receiver



Press at the same time until




...the heater goes on...




...and off

3 Programming the transmitter

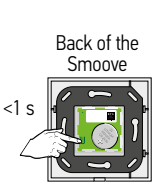

<1 s

Press briefly the PROG button until...

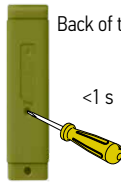

Back of the Situio

<1 s



...the heater goes on...



...and off

Automatic cut-off function.

 
The receiver will switch off automatically after the chosen time

1 Switch on the power supply



Power on

2 Activating / deactivating the automatic cut-off



A



...the heater goes on...



...and off

The automatic cut-off is activated

B

Press at the same time until...



...the heater goes on...



...and off...



...and goes on again...



...and off

 
The automatic cut-off is deactivated

Setting the operating time

1 Open the setting mode



and
Press simultaneous on both buttons



2 s
Press immediately and simultaneously again on the MY and DOWN buttons until...



...the heater goes on...



...and off

2 Choose the cut-off time

A) Cut-off time = 3 hours



Press briefly on the DOWN button



The heater goes on...



...and off

B) Cut-off time = 6 hours



Press briefly on the MY button



The heater goes on...



...and off

C) Cut-off time = 12 hours



Press briefly on the UP button



The heater goes on...



...and off

3 Confirm the settings



2 s

Press until...



...the heater goes on...



...and off